


DRIVEABLE BASE INSTALLATION INSTRUCTIONS

Part #BS-DR00

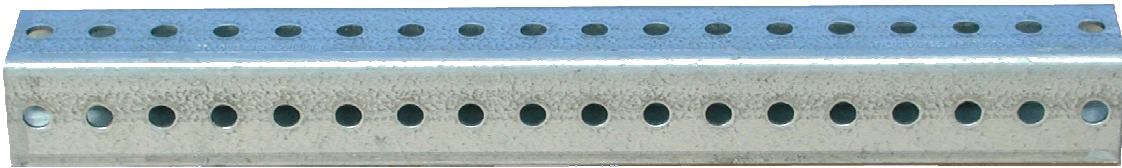

1. Drive the base in the ground approximately 2". Remove the base and dislodge the dirt from the bottom.
2. Using a drive cap and a sledgehammer, drive the base into the ground until 1" is left showing. You can also use a signpost driver with a driver cap. Do not use a sledge hammer directly on the base as it may bend and the unit will not fit into the base.
3. Make sure the unit you are installing is facing traffic and attach the unit with the four (4) $\frac{3}{4}$ " hex screws and washers that are included with the base.

IMPACTrecovery
S Y S T E M S

"Performance for a Safer Tomorrow"

4955 Stout Dr., San Antonio, TX 78219
(210) 736-4477 Office • (210) 734-6448 Fax
www.impactrecovery.com