


1. INSTALL SURFACE MOUNT BASE USING ANCHOR KIT PROVIDED. SEE DIRECTIONS INSIDE KIT. "TRAFFIC" MARKING ON BASE SHOULD BE ORIENTED 90 DEGREES FROM EXPECTED TRAFFIC FOR INCREASED WIND RESISTANCE. ATTACH TO FLAT CONCRETE OR ASPHALT.
2. TIGHTEN THE SET SCREW IN THE BASE USING A 1/8" ALLEN WRENCH. IF A TAMPER RESISTANT BASE WAS NOT USED, INSERT THE TWO KEEPER PIN INTO THE SLOTS.
3. SLIDE CENTERING FOAM OVER THE BOTTOM POST TO THE BOTTOM OF THE ASSEMBLY, JUST ABOVE THE POST ATTACHMENT SCREWS.
4. SLIDE THE BOLLARD COVER OVER THE POST AND FOAM UNTIL IT BOTTOMS OUT ON THE BASE.
5. INSERT TOP PORTION OF ALUMINUM SIGN POST TO LOWER PORTION AND SECURE THE EXTENSION PIECE USING PHILLIPS PAN HEAD SCREWS PROVIDED.
6. ATTACH SIGN BRACKETS TO SIGN FACE THROUGH TWO HOLES IN THE SIGN FACE. FULLY TIGHTEN FRONT BOLT. BE SURE TO KEEP THE BRACKET'S CLAMP HOLES ALIGNED VERTICALLY.
7. LOOSEN THE SIGN BRACKET CLAMPS AND SLIDE THE BRACKETS OVER THE SIGN POST. ONCE IN DESIRED POSITION, TIGHTEN CLAMPING HEX BOLTS.

CALL CUSTOMER SERVICE AT 1-800-736-5256  
IF YOU HAVE ANY ISSUES. WE'RE HAPPY TO HELP.

SEARCH "IMPACT RECOVERY SYSTEMS" ON  
YOUTUBE.COM OR USE THE QR CODE BELOW  
FOR OUR SURFACE MOUNT BASE INSTALLATION  
INSTRUCTIONS.

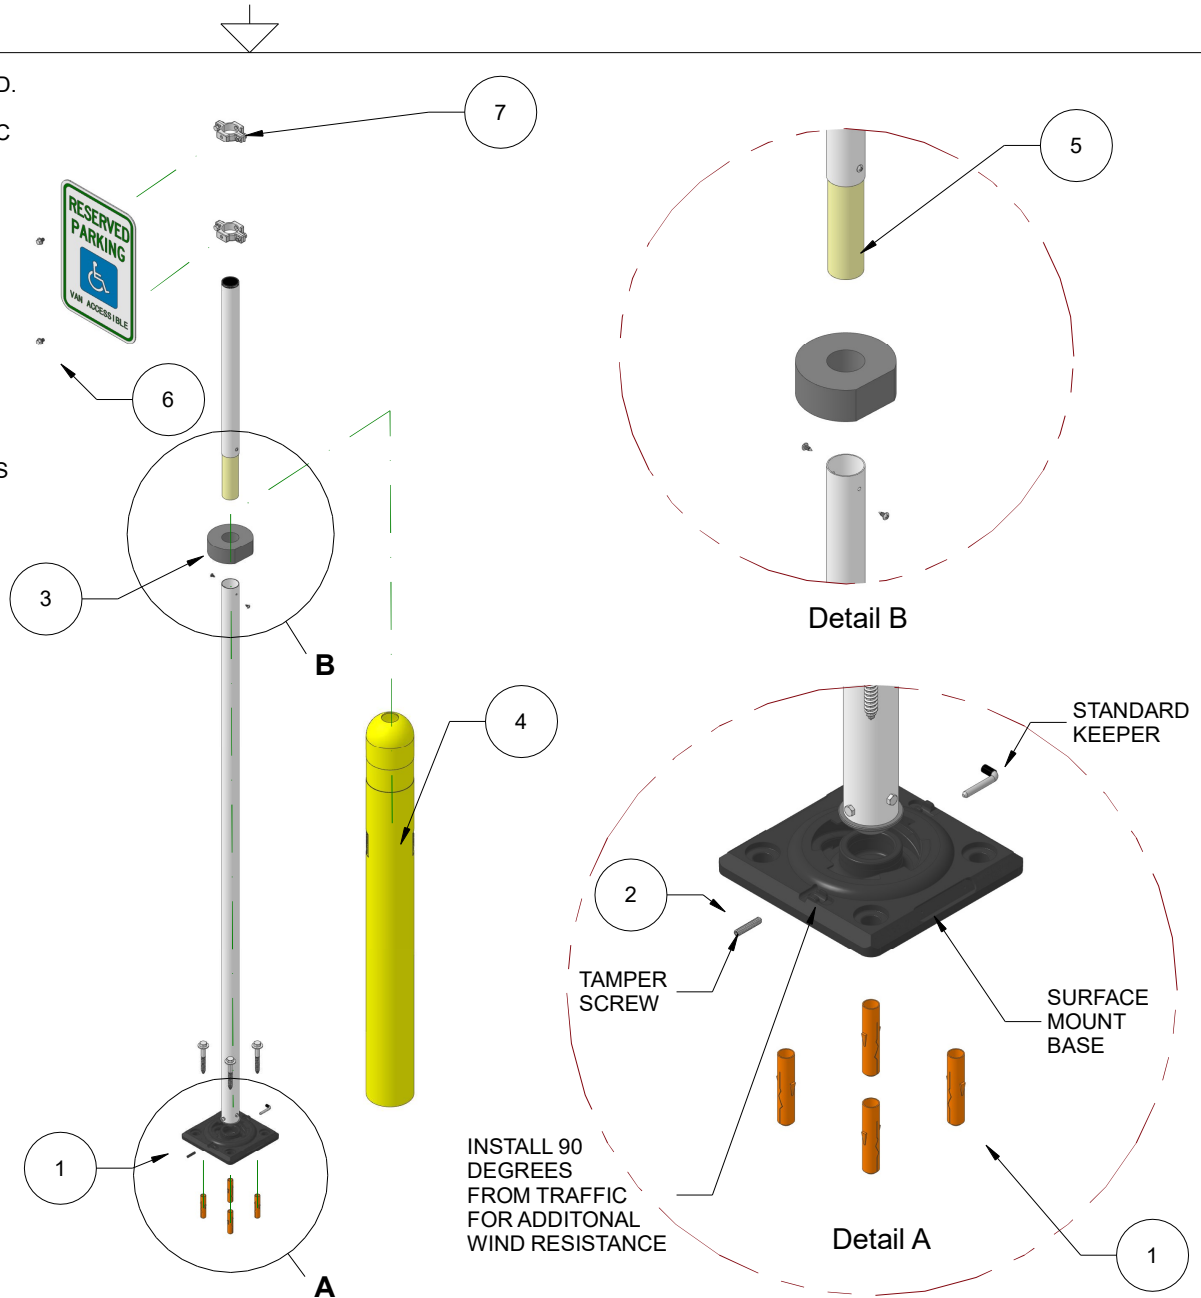

**CONFIDENTIAL & PROPRIETARY**

The drawing on this print and the information therewith are property of Impact Recovery Systems, Inc., and shall not be used or discussed in whole or in part without the consent of Impact Recovery Systems, Inc.

4955 STOUT DR. · SAN ANTONIO, TX 78219 · (800) 736-5256

SIZE  
**A**

PART NO.  
STRCx-02xQT-xx-QTB

DWG.  
STA-RITE BOLLARD  
DOMED COVER SIGN POST

REV  
**1.0**

SCALE

IMPACT RECOVERY SYSTEMS, INC.

DATE 21-AUG-2024